

# GENERAL NOTES

1. FOR SYMBOLS, ABBREVIATIONS AND GENERAL NOTES, SEE DRAWING ME01.
2. REFER TO THE CONTROL DIAGRAMS FOR INSTRUMENTATION.
3. AIRFLOW QUANTITIES SHOWN FOR RETURN/EXHAUST ARE ESTIMATED VALUES FOR INITIAL BALANCING. BALANCING AND CONTROLS CONTRACTOR SHALL WORK TOGETHER DURING COMMISSIONING AND START-UP TO DETERMINE ACTUAL AIRFLOW BEYOND FOR PRESSURIZATION CONTROL.
4. EVERY BRANCH DUCT SHALL HAVE A BALANCING DAMPER. DAMPERS ARE NOT SHOWN FOR CLARITY.

## SHEET NOTES

1. AIR QUANTITIES SHOWN IN PARENTHESES INCLUDE 10% FOR DUCT LEAKAGE AND SAFETY.

